



## PARTS LIST

- |                                |                                  |
|--------------------------------|----------------------------------|
| 1.1 - BARREL                   | 5.3 - FIRING PIN SPRING          |
| 2.5 - REAR INSERT              | 5.4 - FIRING PIN RETAINER        |
| 2.6 - FRONT INSERT             | 5.5 - FIRING PIN SAFETY          |
| 2.7 - REAR INSERT PIN          | 5.6 - FIRING PIN SAFETY SPRING   |
| 2.8 - FRONT INSERT PIN         | 6.1 - MAGAZINE                   |
| 3.1 - TRIGGER                  | 6.6 - MAGAZINE CATCH             |
| 3.2 - TRIGGER PIN              | 6.7 - MAGAZINE CATCH PLUNGER     |
| 3.3 - TRIGGER SPRING           | 6.8 - MAGAZINE CATCH SPRING      |
| 3.5 - TRIGGER BAR              | 8.1 - RECOIL SPRING GUIDE        |
| 3.6 - TRIGGER BAR PIN          | 8.3 - RECOIL SPRING              |
| 3.7 - TRIGGER BAR SPRING       | 9.1 - SEAR                       |
| 3.8 - TRIGGER BAR GUIDE        | 9.2 - SEAR PIN                   |
| 3.9 - TRIGGER BAR PLUNGER      | 9.3 - SEAR SPRING                |
| 3.10 - TRIGGER BAR PLUNGER PIN | 10.2 - REAR SIGHT                |
| 4.1 - HAMMER                   | 11.1 - EXTRACTOR                 |
| 4.2 - HAMMER PIN               | 11.2 - EXTRACTOR PIN             |
| 4.3 - HAMMER SPRING            | 11.3 - EXTRACTOR SPRING          |
| 4.4 - HAMMER STRUT             | 13.1 - SEAR HOUSING              |
| 4.5 - HAMMER STRUT PIN         | 14.1 - SAFETY                    |
| 4.8 - INTERRUPTOR              | 18.1 - SLIDE STOP PIN            |
| 4.9 - INTERRUPTOR PIN          | 18.3 - SLIDE STOP PIN SPRING     |
| 5.1 - FIRING PIN               | 18.4 - SLIDE STOP PIN SPRING PIN |
|                                | A - FRAME                        |
|                                | B - SLIDE                        |