



PARTS LIST

- | | |
|--------------------------------|----------------------------------|
| 1.1 - BARREL | 5.3 - FIRING PIN SPRING |
| 2.5 - REAR INSERT | 5.4 - FIRING PIN RETAINER |
| 2.6 - FRONT INSERT | 5.5 - FIRING PIN SAFETY |
| 2.7 - REAR INSERT PIN | 5.6 - FIRING PIN SAFETY SPRING |
| 2.8 - FRONT INSERT PIN | 6.1 - MAGAZINE |
| 3.1 - TRIGGER | 6.6 - MAGAZINE CATCH |
| 3.2 - TRIGGER PIN | 6.7 - MAGAZINE CATCH PLUNGER |
| 3.3 - TRIGGER SPRING | 6.8 - MAGAZINE CATCH SPRING |
| 3.5 - TRIGGER BAR | 8.1 - RECOIL SPRING GUIDE |
| 3.6 - TRIGGER BAR PIN | 8.3 - RECOIL SPRING |
| 3.7 - TRIGGER BAR SPRING | 9.1 - SEAR |
| 3.8 - TRIGGER BAR GUIDE | 9.2 - SEAR PIN |
| 3.9 - TRIGGER BAR PLUNGER | 9.3 - SEAR SPRING |
| 3.10 - TRIGGER BAR PLUNGER PIN | 10.2 - REAR SIGHT |
| 4.1 - HAMMER | 11.1 - EXTRACTOR |
| 4.2 - HAMMER PIN | 11.2 - EXTRACTOR PIN |
| 4.3 - HAMMER SPRING | 11.3 - EXTRACTOR SPRING |
| 4.4 - HAMMER STRUT | 13.1 - SEAR HOUSING |
| 4.5 - HAMMER STRUT PIN | 13.2 - SEAR HOUSING PIN |
| 4.8 - INTERRUPTOR | 14.1 - FIRING PIN SAFETY (LEFT) |
| 4.9 - INTERRUPTOR PIN | 14.2 - FIRING PIN SAFETY PLUNGER |
| 5.1 - FIRING PIN | 14.3 - FIRING PIN SAFETY SPRING |
| | 14.4 - SEAR SAFETY |
| | 14.5 - SEAR SAFETY SPRING |
| | 14.6 - FIRING PIN SAFETY (RIGHT) |
| | 14.7 - FIRING PIN SAFETY PIN |
| | 18.1 - SLIDE STOP PIN |
| | 18.3 - SLIDE STOP PIN SPRING |
| | 18.4 - SLIDE STOP PIN SPRING PIN |
| | A - FRAME |
| | B - SLIDE |